
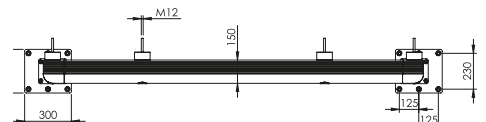
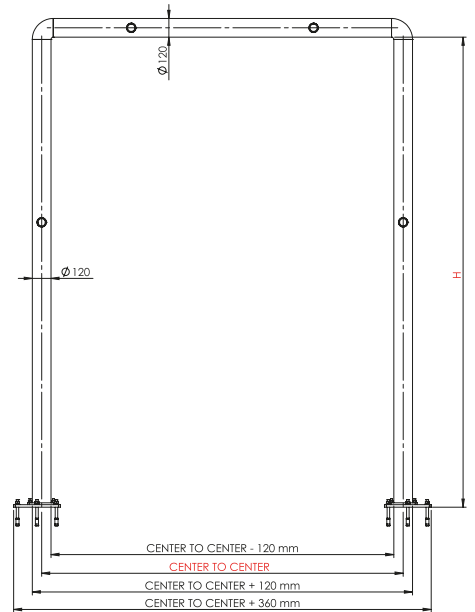


FULL FRAME

PROTEZIONE PORTA FULL FRAME
FULL FRAME DOOR PROTECTION


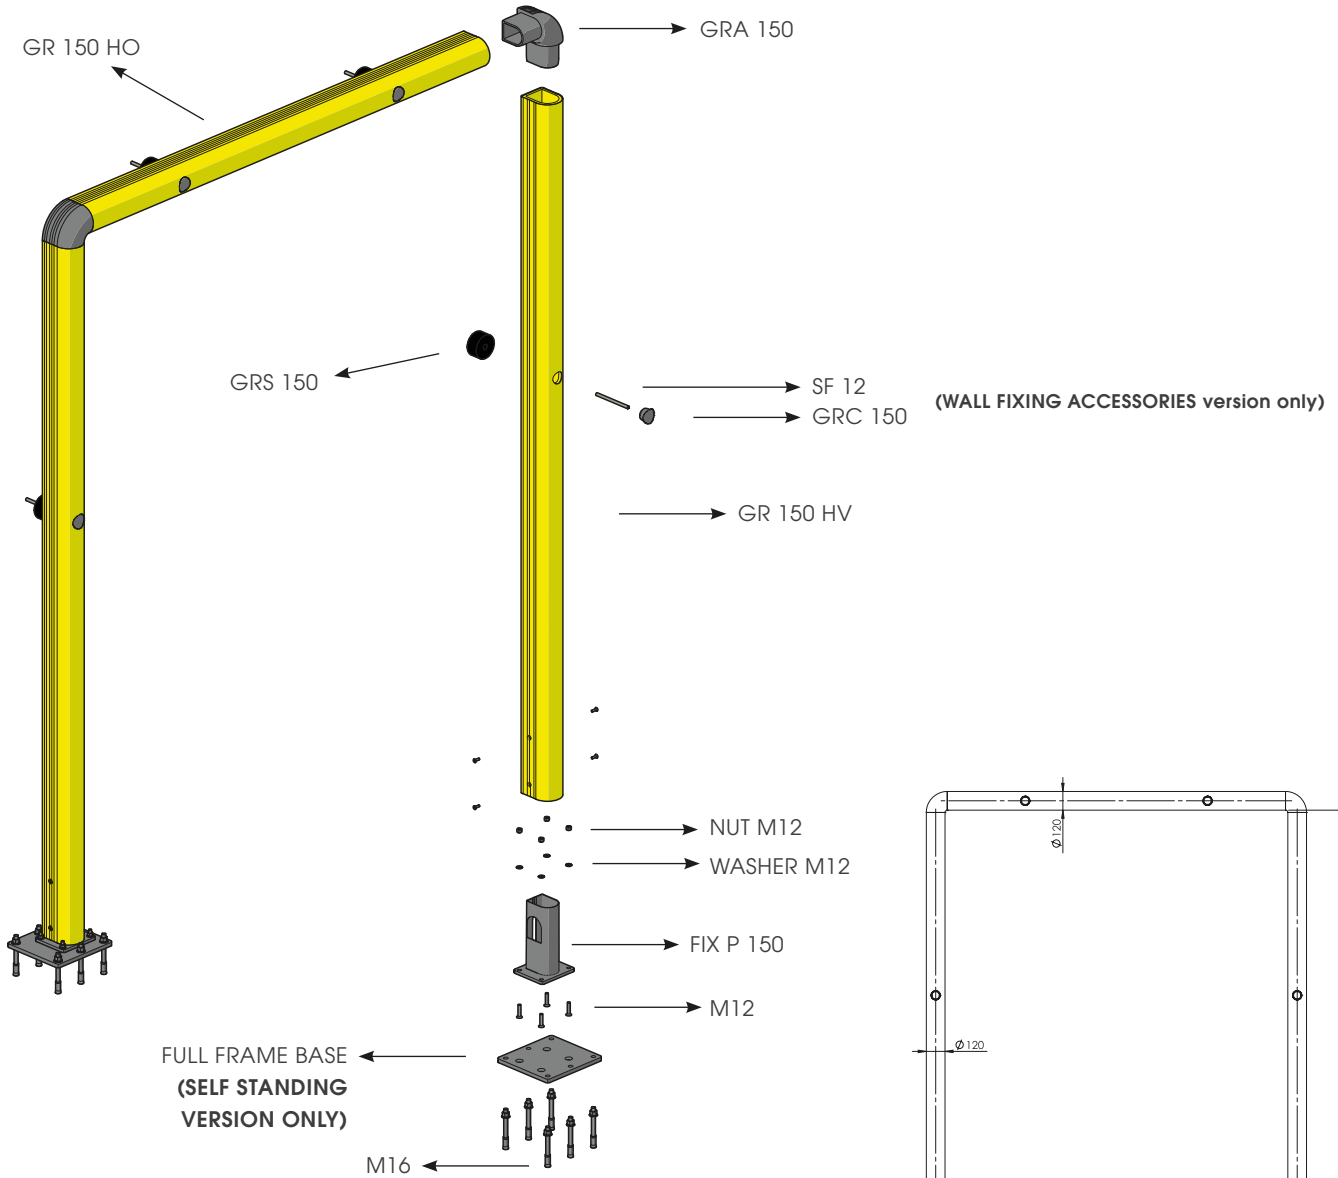


WARNING SELF STANDING

Full Frame up to 5000mm high and 5000mm wide can be used without being mounted to the wall

FULL FRAME

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

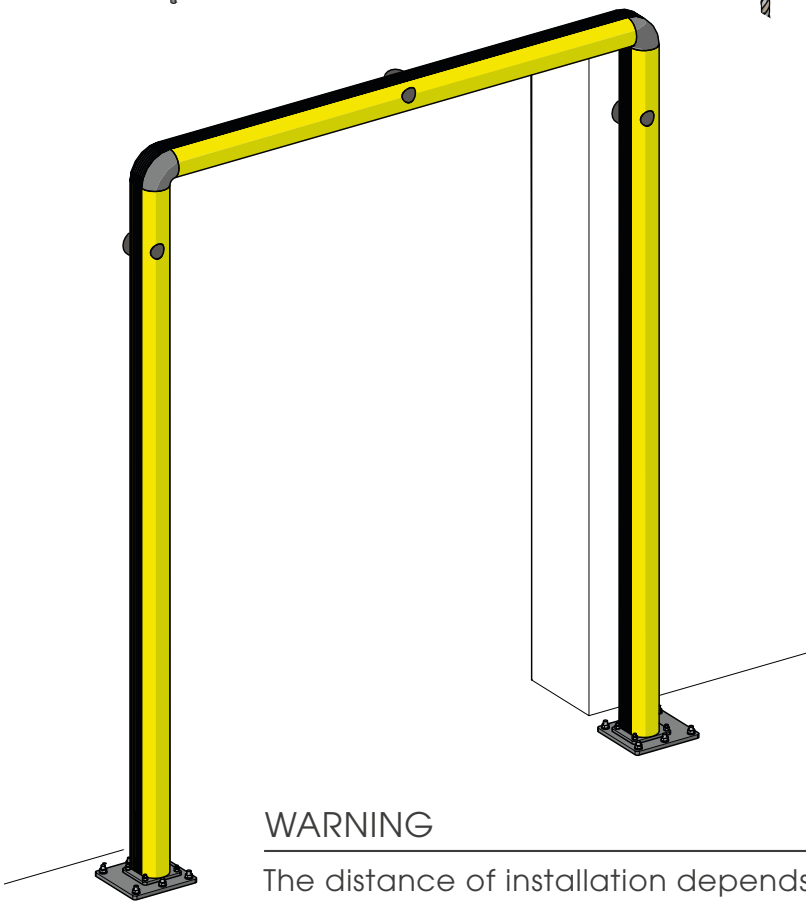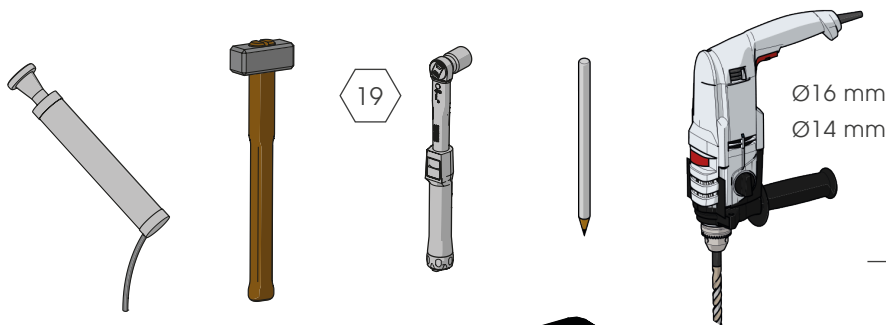


WARNING


The distance of installation depends on speed and weight of vehicle and also on the dimension of the full frame

WALL


MIN 200mm*

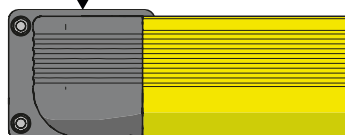


1

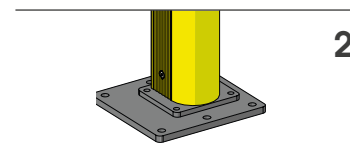


2

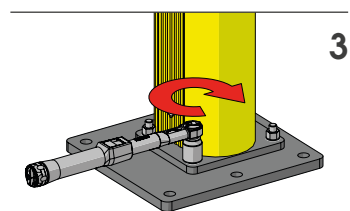

3

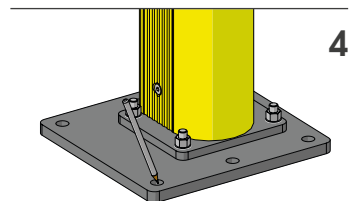

4

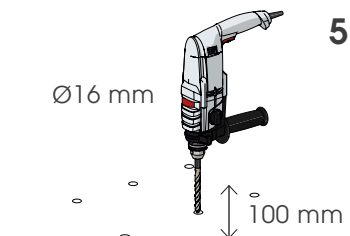

5

FULL FRAME

ISTRUZIONI DI INSTALLAZIONE
ASSEMBLY INSTRUCTIONS

